



RELEASED  
16.04.25

PPP

Part Number D350-600-242

Description Spacepod, Fwd Opening, RH

Box Part Number MBX115 Dimension 60 x 35 x 6

Other Packaging MFSP Kit


Logo Decals D3567-2

#### Packaging Instructions and Decal Placement

D350-600-242


Apply label D2729-4 as per drawing below

Secure the box by applying clear tape over it. Place MFSP Kit and then insert spacepod. Wrap spacepod floor in foam and place next to spacepod, then insert hardware kit and paperwork. Close box, strap three times, and apply clear tape over strappings. Apply D2729-3 label as per instructions in QSI 014.

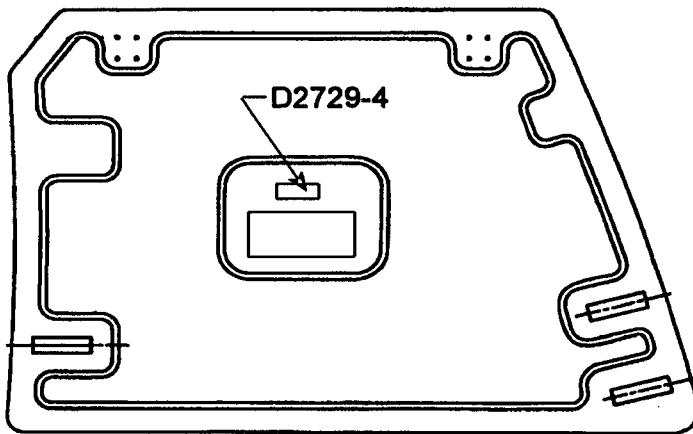

D2729-4

D2729-3

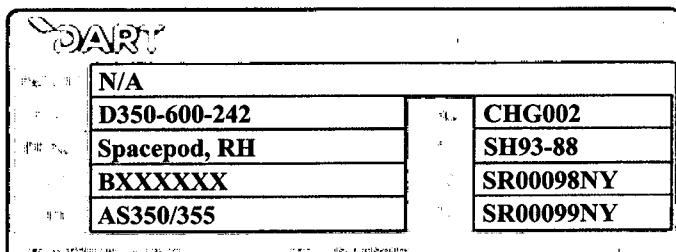

Revision: D  
Date: 16.04.14